



How to Change Network Address

Tech Guide

WASHLINK SYSTEMS Change Network address

This document provides comprehensive information for changing Network address on Washlink Systems PC or Saleslink Terminal

Unique Network address are required on all pieces of hardware connected to a newtork Washlink Systems uses very specific network addresses and they must be correct for the attached equipment to communicate and operate correctly.

When emailing or calling for assistance, you must have the following information available:

Location Name: _____

Contact Person: _____

Contact Phone: _____

Director Service Tag: _____



Distributor Name: _____

COPYRIGHT

2011 Washlink Systems. All rights reserved.


THIS DOCUMENT IS THE EXCLUSIVE PROPERTY OF WASHLINK SYSTEMS AND IS PREPARED ONLY FOR USE BY THE COMPANY PURCHASING THE EQUIPMENT. EDITING, COPYING, DISTRIBUTING, AND/OR SELLING THIS DOCUMENT IS STRICTLY PROHIBITED WITHOUT PRIOR WRITTEN CONSENT FROM WASHLINK SYSTEMS. WASHLINK SYSTEMS RESERVES THE RIGHT TO EDIT THIS DOCUMENT IN ANY MANNER DEEMED NECESSARY, AT ANY TIME, AND WITHOUT PRIOR NOTICE.

Windows 10 Change Network Address

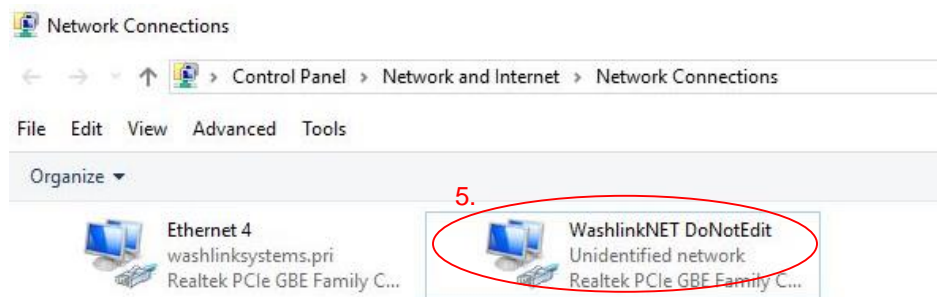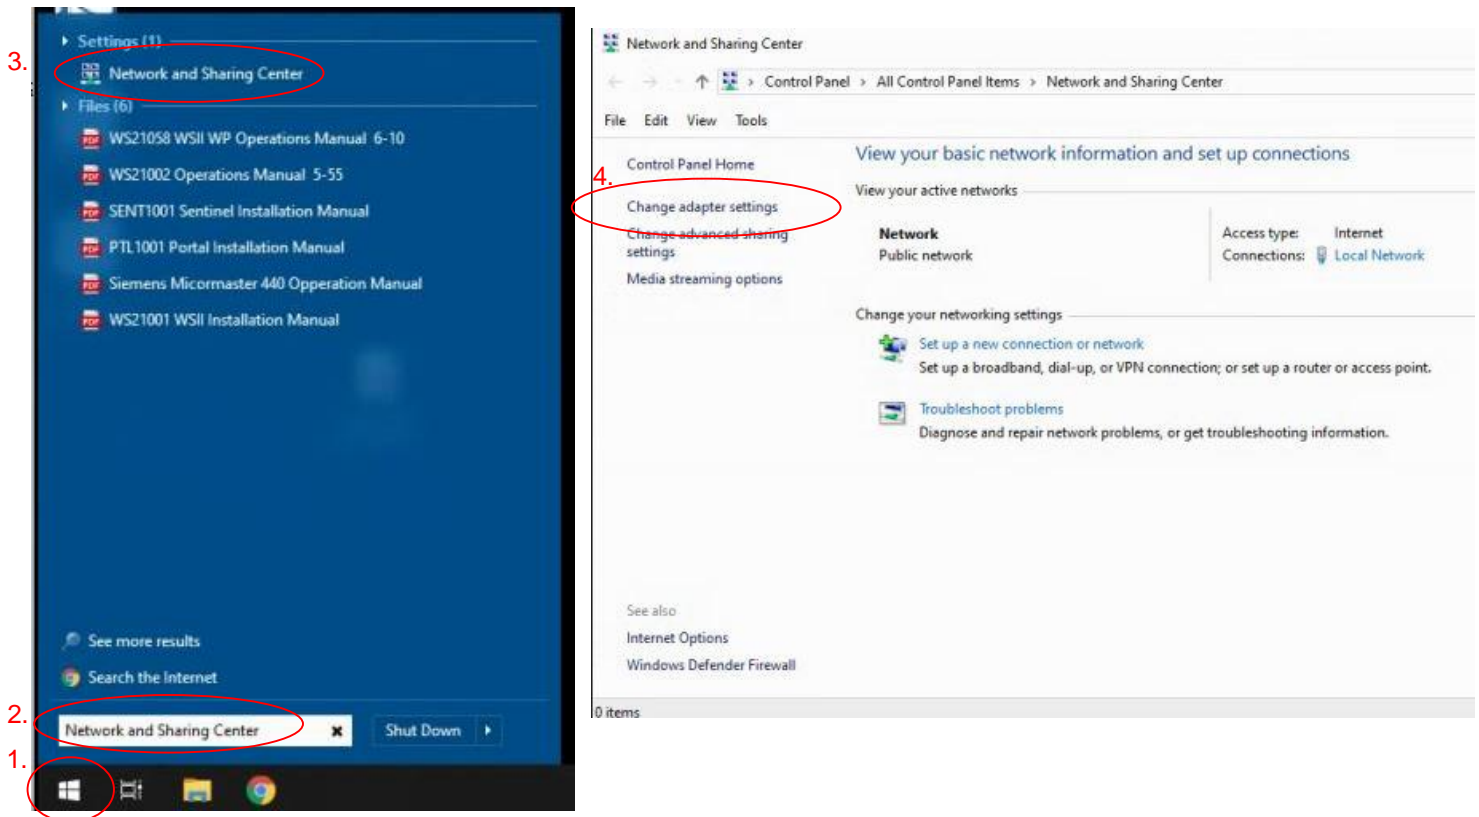

1. From Windows home screen, LEFT click the **Windows Logo**.
2. In the search box, type **Network and Sharing Center**.
3. LEFT Click the **Network and Sharing Center** icon.
4. LEFT Click the **Change Adaptor Settings** tab.
5. RIGHT Click the **WashlinkNET DoNotEdit** network adaptor.

Windows 10 Change Network Address

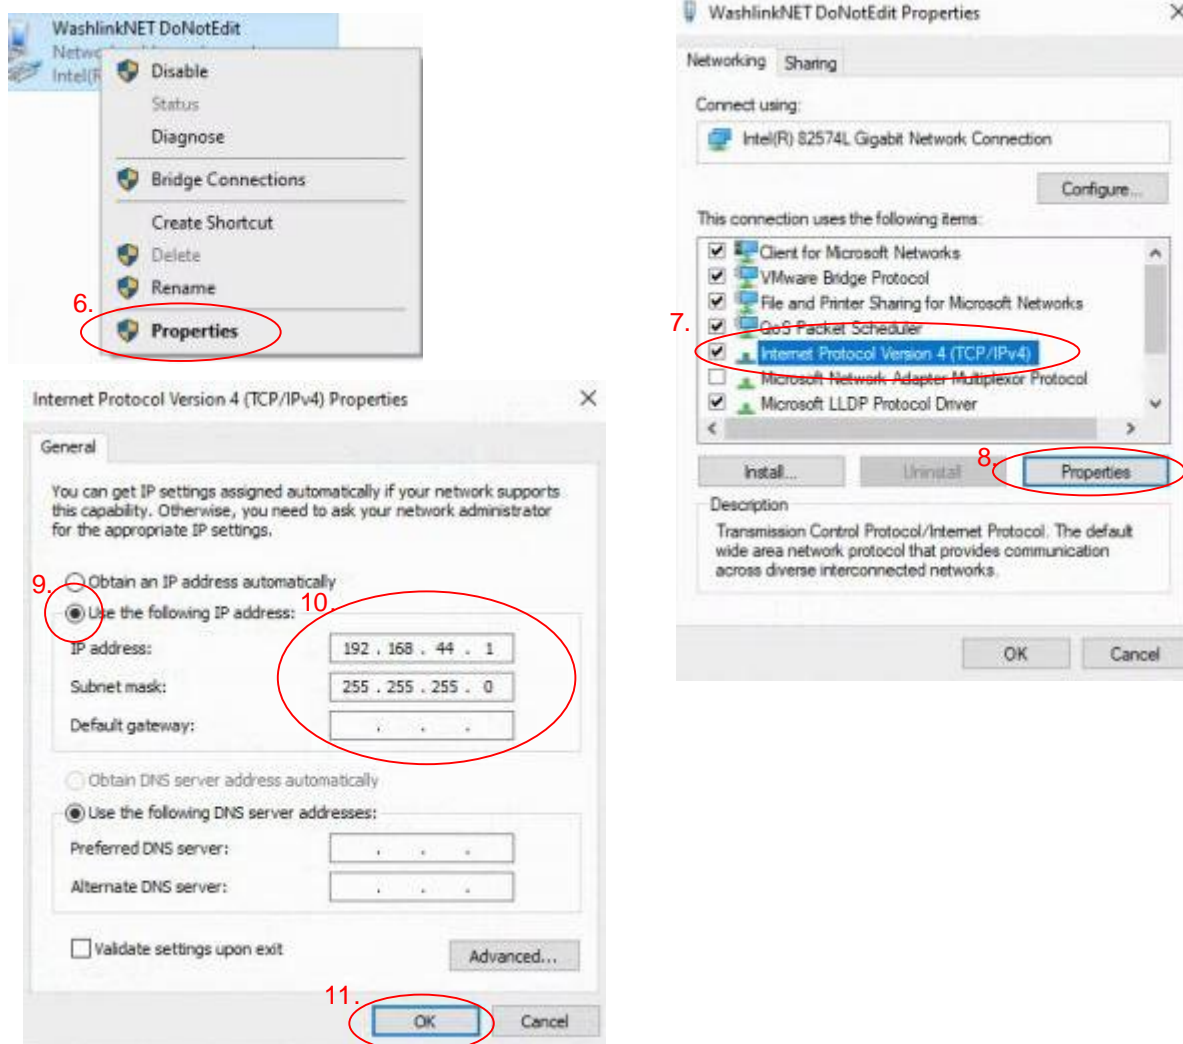


6. LEFT click **Properties** icon.
7. LEFT click once to select & highlight Internet Protocol Version 4 (TCP/IPv4).
8. LEFT click **Properties**.
9. Make sure **Use the following IP address:** is checked.
10. Use the following information for Director Server/PC
 - IP address: **192.168.44.1**
 - Subnet mask: **255.255.255.0**
 - Default gateway: **<leave blank>**
 - Preferred DNS server: **<leave blank>**
 - Alternate DNS server: **<leave blank>**

Use the following information for Terminal PC


- IP address: **Consult factory for Saleslink Terminal IP Address**
- Subnet mask: **255.255.255.0**
- Default gateway: **<leave blank>**
- Preferred DNS server: **<leave blank>**
- Alternate DNS server: **<leave blank>**

11. Press **OK** and Close all windows.

Windows XP Pro

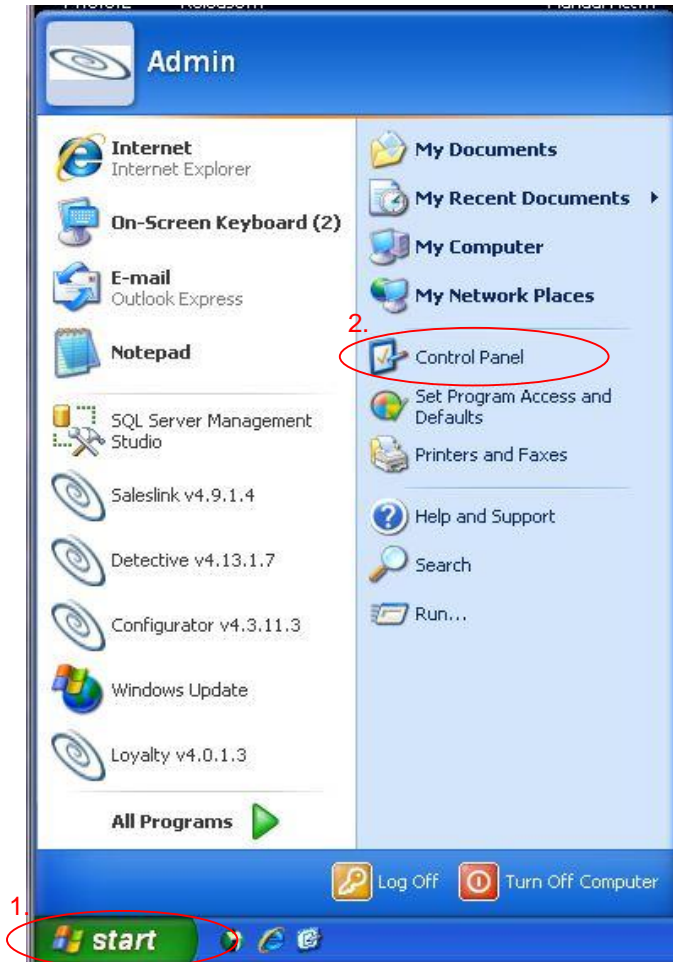


Windows 7 Pro

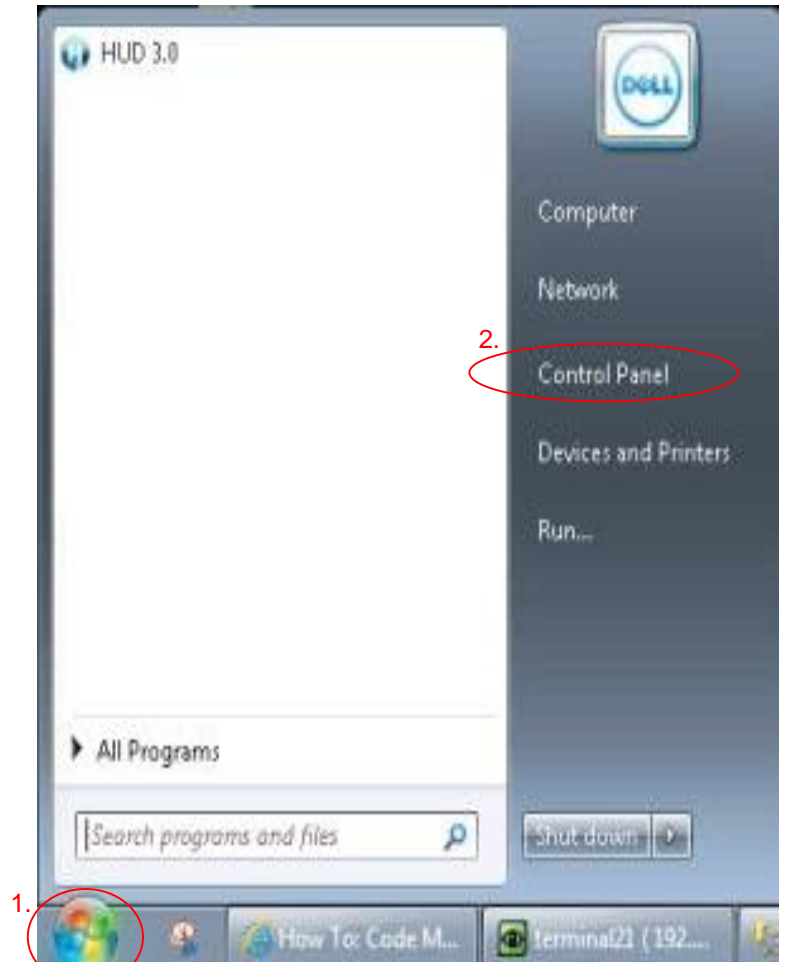


1. From Windows home screen, press the **Start** button (Windows XP Pro) or **Windows Logo** (Windows 7 Pro).
2. Select **Control Panel**


Windows XP Pro, Category View

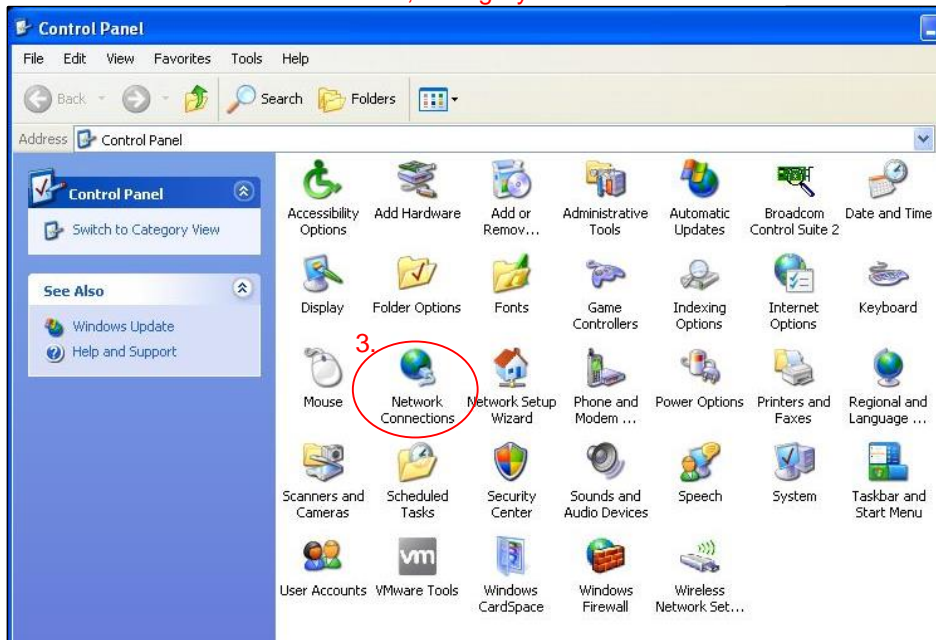


Windows XP Pro, List View

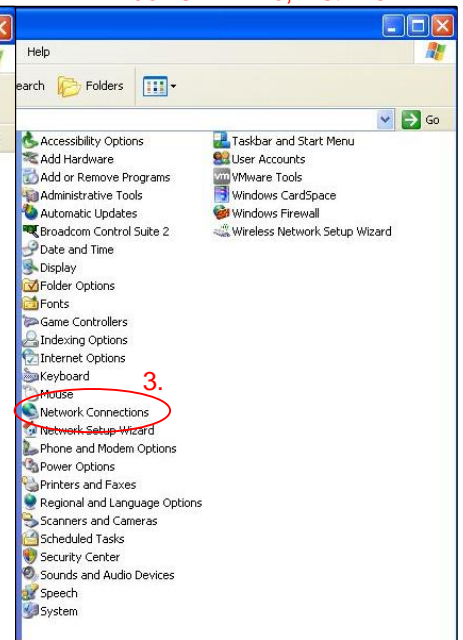

Windows 7 Pro, Category View

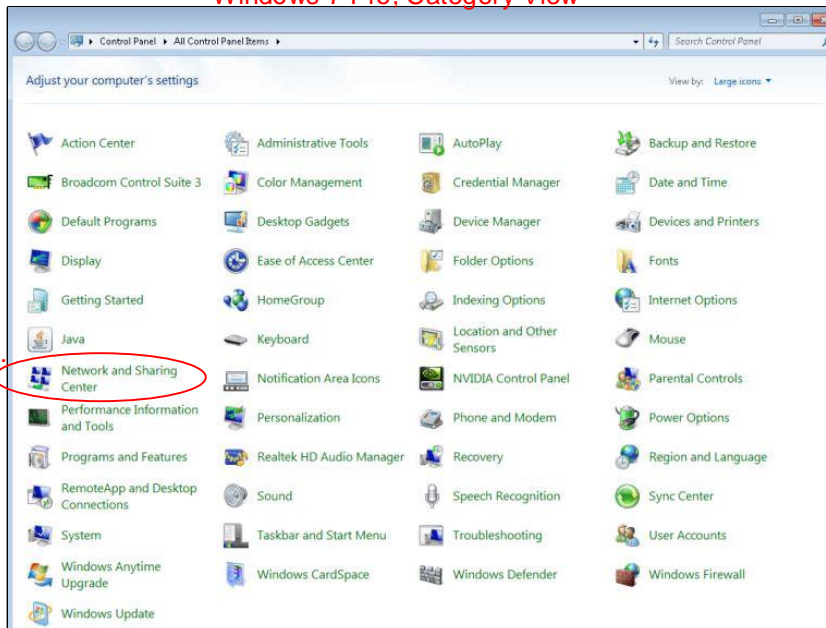


Windows 7 Pro, List View



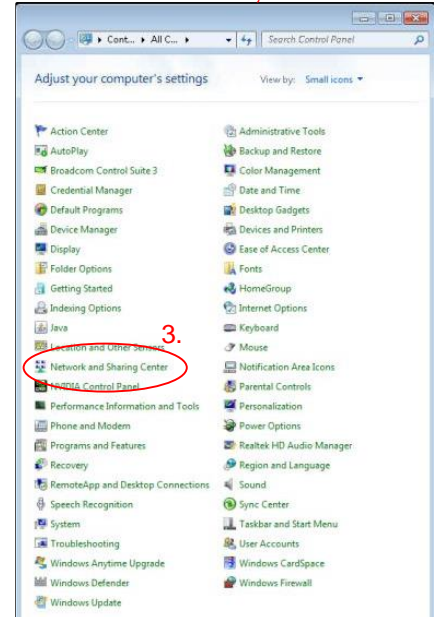


3. Select Network Connections (Windows XP Pro) or Network and Sharing Center (Windows 7 Pro)

Windows XP Pro, Category View


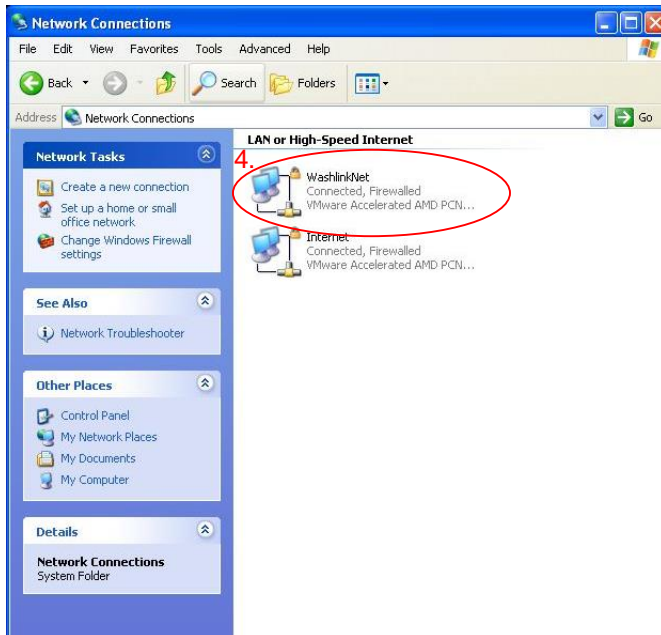


Windows XP Pro, List View

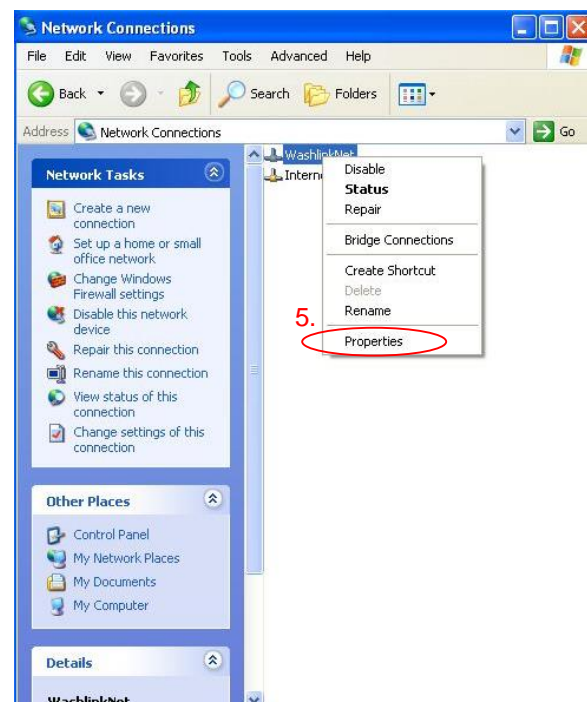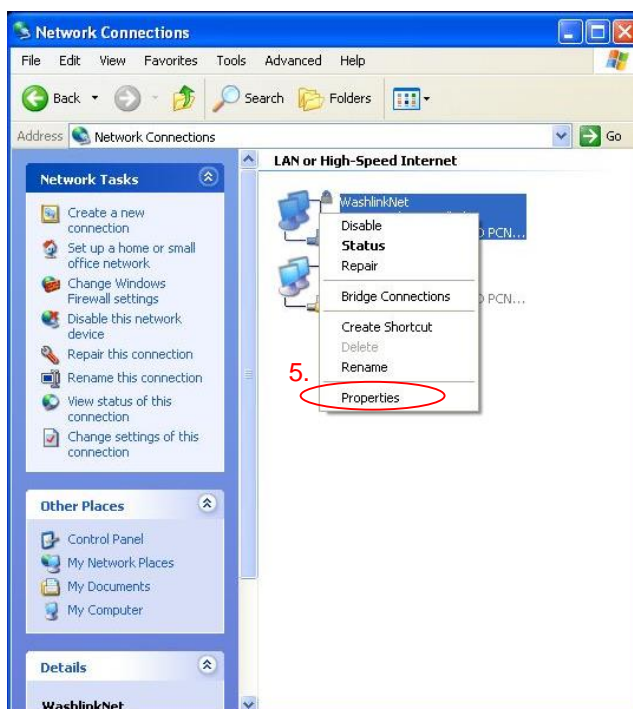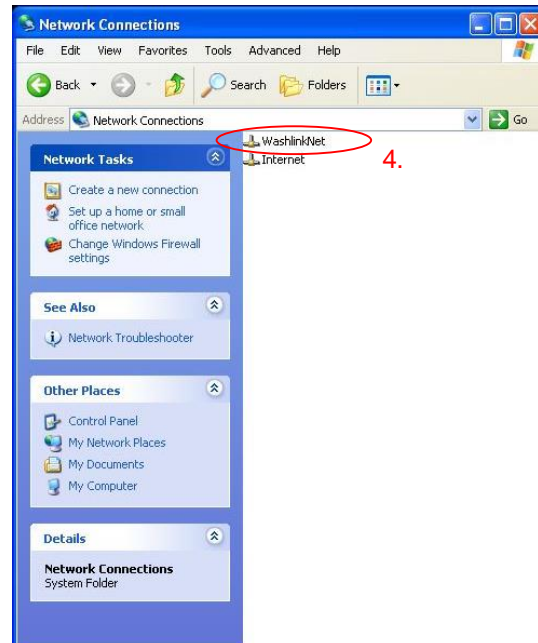



WINDOWS XP PRO ONLY. SEE NEXT PAGE FOR WINDOWS 7 PRO

4. With the mouse, RIGHT click **WashlinkNET**
5. Select **Properties**

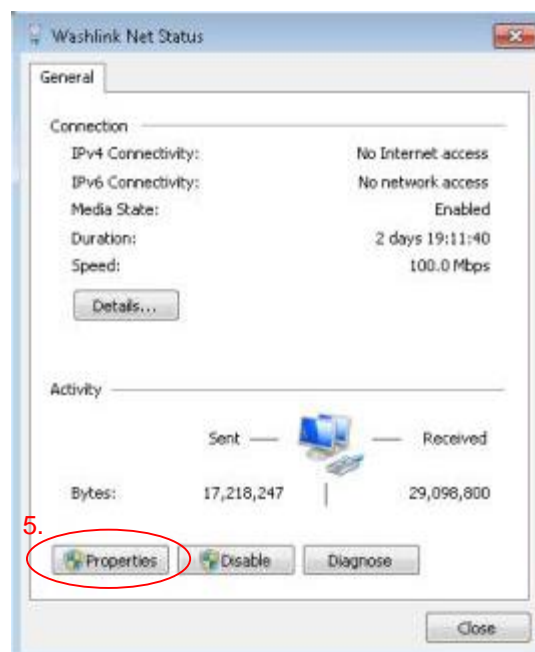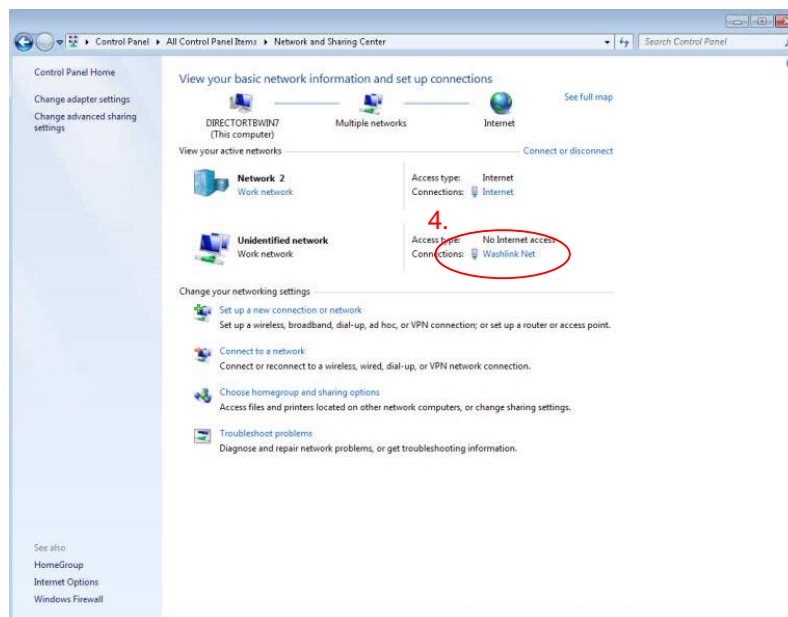

WINDOWS 7 PRO ONLY, SEE PREVIOUS PAGE FOR WINDOWS XP PRO

4. Select **WashlinkNET**
5. Select **Properties**

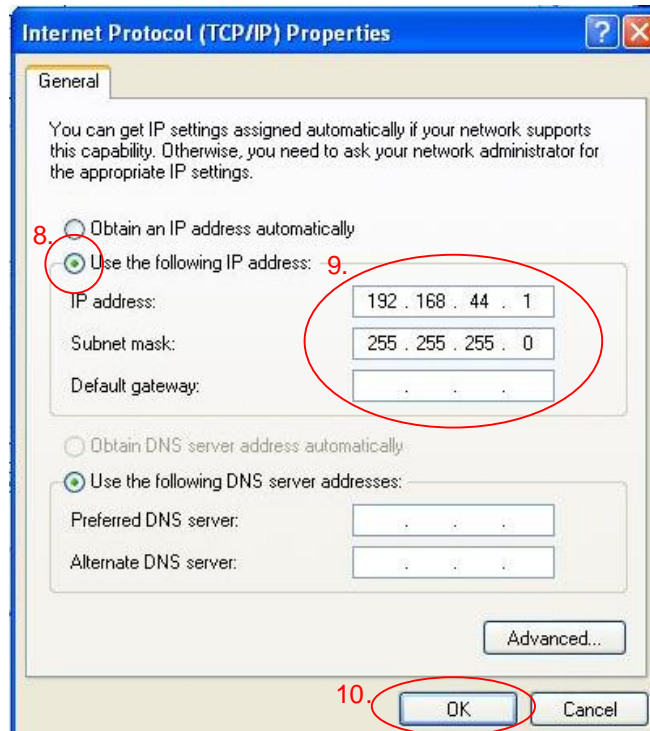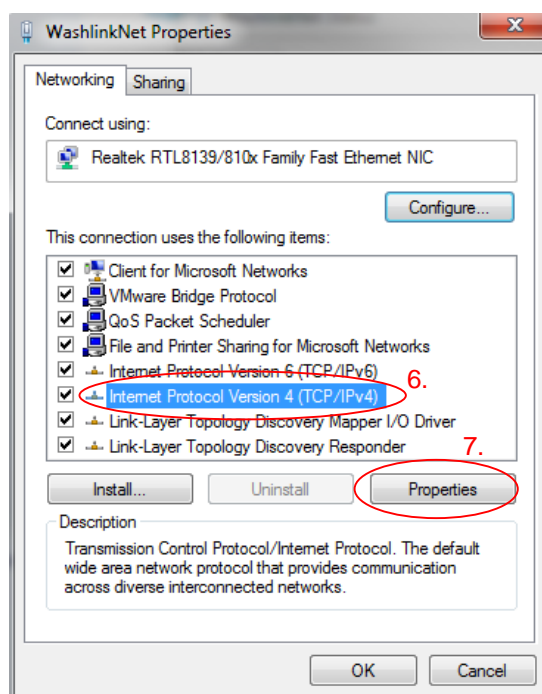

6. LEFT click once to select & highlight Internet Protocol Version 4 (TCP/IPv4)
7. Select **Properties**
8. **Use the following IP address** radial MUST be selected
9. Use the following information for Director PC or Manager PC
 - IP address: **192.168.44.1**
 - Subnet mask: **255.255.255.0**
 - Default gateway: **<leave blank>**
 - Preferred DNS server: **<leave blank>**
 - Alternate DNS server: **<leave blank>**

Use the following information for Terminal PC

- IP address: **Consult factory for Saleslink Terminal IP Address**
- Subnet mask: **255.255.255.0**
- Default gateway: **<leave blank>**
- Preferred DNS server: **<leave blank>**
- Alternate DNS server: **<leave blank>**

10. Press **OK** and Close all windows